


Installation instructions

SQUARE ACOUSTIC PANELS





You will need a glue gun, FibroTech assembly adhesive, a spirit level, screwdriver, pencil and FibroTech black screws. We suggest you use cotton gloves when installing your product.

Note: Because of the amount of wood in the acoustic panels, they may smell a bit of wood. Therefore we recommend they are acclimatized before installation.

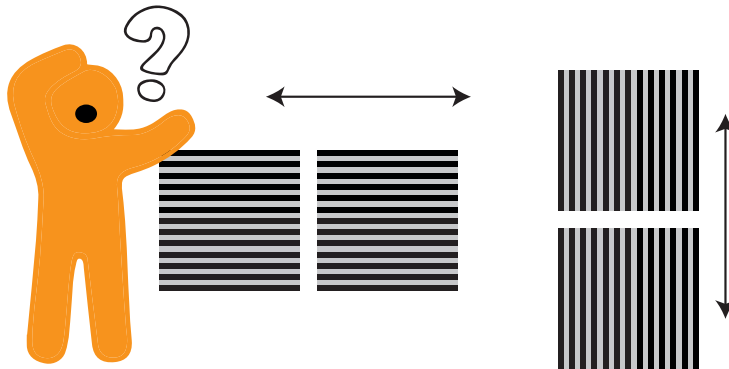

Decide in which direction you wish to install your SQUARE acoustic panels. Your wall design is all up to you. Each panel is 520 x 520 mm.

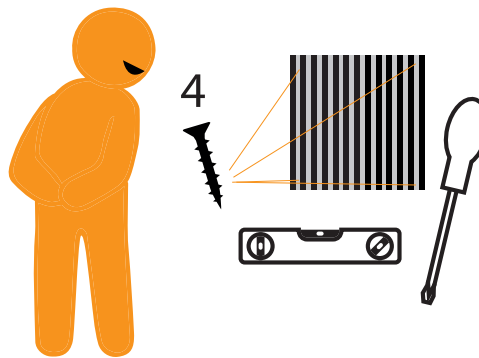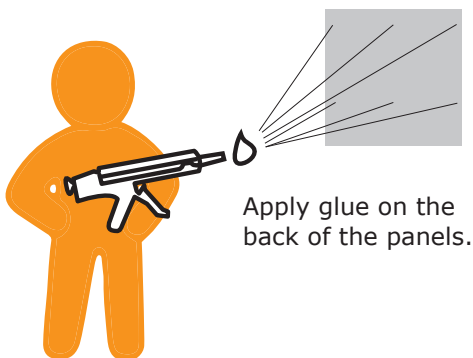

Use screws to install the acoustic panels on a wall or ceiling. You need 4 screws for each panel.

Remember to hold onto wadding or solder.



If you have questions, contact the supplier.



Importer:
TreeTops A/S